


Subject to change, errors and misprints

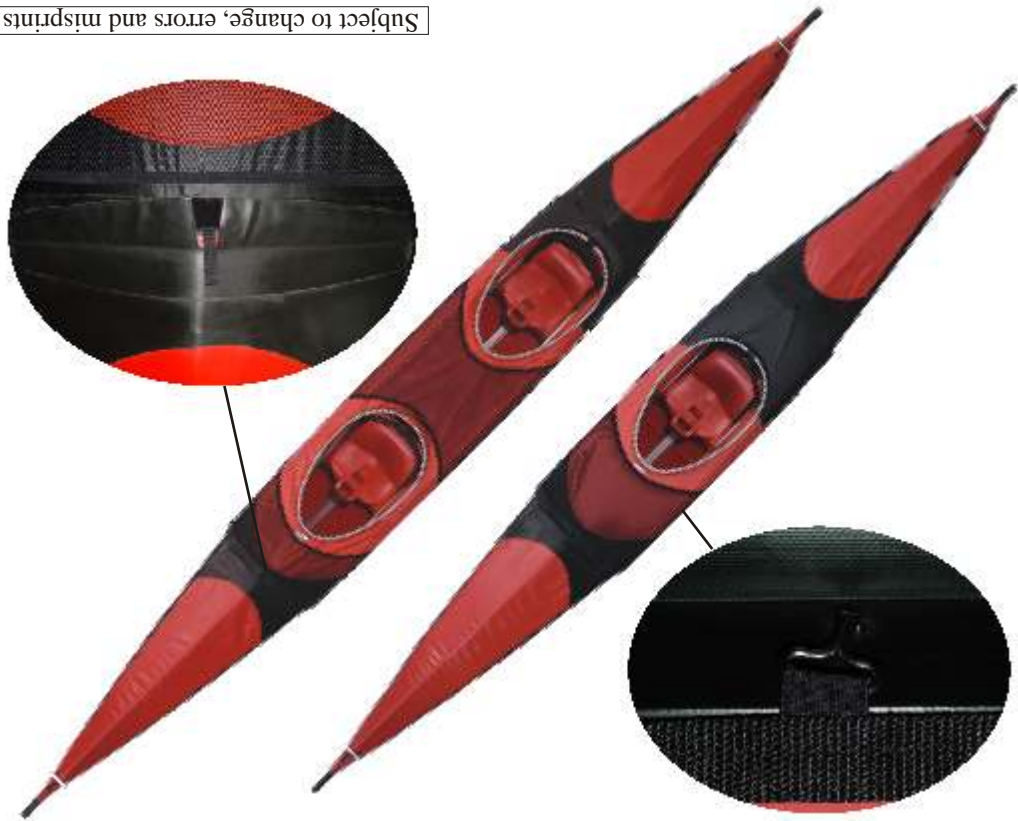

INSTRUCTIONS FOR ASSEMBLY AND USE

SPRAYDECK DISCOVERY


GRABNER GMBH
LUFTBOOTE- UND SPORTARTIKELFABRIK
Weistracher Straße 11, A-3350 HAAG/Austria
Telefon: 07434/42251 fax: 07434/42251-66
oder 3, e-mail: grabner@grabner-sports.at
www. grabner-sports.at



GRABNER GMBH
LUFTBOOTE- UND SPORTARTIKELFABRIK
Weistracher Straße 11, A-3350 HAAG/Austria
Telefon: 07434/42251 fax: 07434/42251-66
oder 3, e-mail: grabner@grabner-sports.at
www. grabner-sports.at

SPRITZDECKE DISCOVERY

MONTAGEANWEISUNG

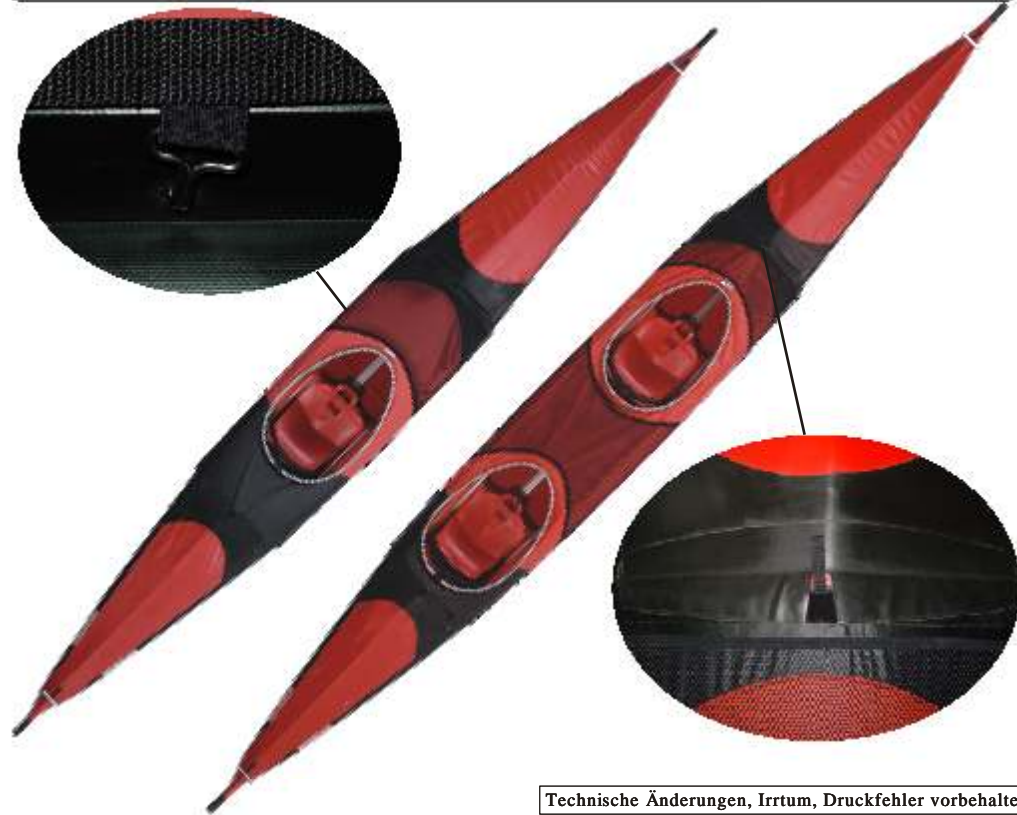

Technische Änderungen, Irrtum, Druckfehler vorbehalten.

LIEBER WASSERSPORTFREUND!

Diese Information soll Ihnen helfen, Ihre Spritzdecke richtig zu montieren und zu gebrauchen. Lesen Sie bitte alle Kapitel sorgfältig durch - Sie ersparen sich dadurch Ärger und mögliche Beschädigungen.

STÜCKLISTE

- 1 Spritzdecke
- 2 (1) Wildwasser-Schürzen
() = DISCOVERY 1 und
DISCOVERY 2, 1-Sitzer

MONTAGE

- Öffnen Sie die Klettverbindung vom Bug- und Heckverdeck.
- Nehmen Sie das hintere Ende der Spritzdecke und drücken Sie die Spritzdecke zuerst in der Mitte - *die Gurtschlaufe muss genau zwischen den beiden Kletthälften vom Verdeck sein* - und dann links und rechts auf den Klettverschluß am Heckverdeck.
- *Das GRABNER Logo auf der Spritzdecke muß vorne sein und die Ringe müssen nach oben schauen.*
- Drücken Sie dann die Klettverschluß-Abdeckung zu.
- Nehmen Sie die Gurtschlaufe an der Spritzdecken-Vorderseite und ziehen Sie die Spritzdecke nach vorne, zwischen die beiden Kletthälften am Bugverdeck und drücken Sie die Spritzdecke an.
- Schließen Sie Klettverschluß-Abdeckung.
- Hängen Sie die seitlichen Haken der Spritzdecke an den Löchern der Andockleisten ein.
- Das Einhängen der Haken geht leichter, wenn Sie das Boot etwas zusammendrücken.

Schürzen:

- Ziehen Sie die Schürze über den Körper (Paniklösegriff ist vorne in der Mitte).
- Setzen Sie sich ins Boot und drücken Sie das Gummikabel über den Süllrand (Rückwärts beginnen und mit beiden Händen gleichzeitig seitlich links + rechts nach vorne drücken).
- Passen Sie den oberen elastischen Abschluss der Schürze am Körperumfang an.
- Im Falle von Kenterungen rutscht die Schürze automatisch über den Süllrand der Spritzdecke.
- In Notfällen kann die Schürze auch mit dem Paniklösegriff rasch abgezogen werden.

Lukendeckel:

- Der Lukendeckel (Sonderzubehör) wird wie die Wildwasser-Schürze von hinten über den Süllrand gestülpt und nach vorne gedrückt.

ACHTUNG:

Die Kunststoff-Süllränder ändern bei Temperaturveränderung ihre Steifigkeit (Bei kalten Temperaturen ist der Süllrand hart - bei warmen Temperaturen wird er weich)!

Die grundsätzlich rostfreien Nirosta-Haken können eventuell leichten "Flugrost" ansetzen - das ist keine Qualitätsminderung!

PFLEGE UND LAGERUNG

- Schützen Sie die Spritzdecke vor spitzen und scharfen Gegenständen.
- Vermeiden Sie unnötige Deformierungen der Süllränder .
- **ACHTUNG:** Die Süllränder beim Verpacken nicht knicken!
- Reinigen Sie die Spritzdecke vor dem Verpacken.
- Spülen Sie die Spritzdecke nach Salzwassergebrauch mit Süßwasser ab.
- Schützen Sie die Spritzdecke bei der Lagerung vor direkter Sonneneinstrahlung.
- Reparieren Sie eventuelle Beschädigungen mit einem PVC-Kleber.

- Pull the white water apron over your body (the panic release handle is front-center).
- Sit in the boat and the push rubber edge of the apron over the coaming edge of the spray deck. Begin at the rear and push to the front with both hands at the same time.
- Adjust the upper rubber end to your body with the Tanka closure.
- **ATTENTION:** When capsizing, the white water apron is released automatically from the spray deck coaming.
- In emergencies, release the white water apron by pulling on the panic release handle.
- The hatch cover is placed over the coaming from the rear and pushed forward, as with the white water apron.
- **ATTENTION:** The stiffness of the plastic coaming edges varies with the temperature (stiff at cold temperatures, soft at warm temperatures).
- Protect the spray cover from sharp and pointed objects.
- Avoid any unnecessary deformation of the coamings.
- **ATTENTION:** Do not bend the coamings when packing!
- Clean the spray cover before packing.
- Rinse the spray cover with fresh water after salt-water usage.
- With frequent salt-water usage, we recommend going over the Nirosta hooks with an oil-saturated cloth.
- Store the spray cover out of direct sunlight.
- Repair any damages with PVC glue.

CARE AND STORAGE

- Pull the white water apron over your body (the panic release handle is front-center).
- Sit in the boat and the push rubber edge of the apron over the coaming edge of the spray deck. Begin at the rear and push to the front with both hands at the same time.
- Adjust the upper rubber end to your body with the Tanka closure.
- **ATTENTION:** When capsizing, the white water apron is released automatically from the spray deck coaming.
- In emergencies, release the white water apron by pulling on the panic release handle.
- The hatch cover is placed over the coaming from the rear and pushed forward, as with the white water apron.
- **ATTENTION:** The stiffness of the plastic coaming edges varies with the temperature (stiff at cold temperatures, soft at warm temperatures).
- Protect the spray cover from sharp and pointed objects.
- Avoid any unnecessary deformation of the coamings.
- **ATTENTION:** Do not bend the coamings when packing!
- Clean the spray cover before packing.
- Rinse the spray cover with fresh water after salt-water usage.
- With frequent salt-water usage, we recommend going over the Nirosta hooks with an oil-saturated cloth.
- Store the spray cover out of direct sunlight.
- Repair any damages with PVC glue.

- Open the Velcro connections of the bow and stern canopies.
- Take the rear end of the spraydeck and press the spraydeck first in the middle - the belt loops must be exactly in the middle of both Velcro halves - and then left and right on the Velcro closure on the stern canopy.
- The net located on the spraydeck must be in the front and the rings must look upwards.
- Press the cover fitted with the Velcro closure shut.
- Take the belt loops on the frontal part of the spraydeck and pull the spraydeck to the front, between both Velcro halves on the bow canopy and then press the spraydeck closure.
- Close the cover fitted with the Velcro closure.
- Fix the side hooks of the spraydeck on the holes of the docking cleats.
- In order to fix the hooks more easily, "crush" the boat a bit.

ASSEMBLY

- 1 Spraydeck
- 2 (1) White-water aprons
- () = DISCOVERY 1 and DISCOVERY 2, 1-seater

PARTS LIST

This information is provided to assist in the correct mounting and usage of your SPRAY DECK. Please read through all chapters carefully to avoid problems and possible damages.

DEAR WATER SPORTS FRIEND,